



RLI-80 Series Radar Level Sensor Bracket Assembly Sheet, Part # 261977

The adjustable bracket allows easy installation and alignment of the RLI-80 for ceiling or wall mounting. The RLI-80 comes standard with 1 1/4"-12 threads and jam nut that is compatible with the bracket hole.

STEP 1:

Insert 261976 inside of 261974 so the holes align.

STEP 2:

Insert 261978 screws into each hole within the bracket.

STEP 3:

Thread 261979 nuts onto 261978 screws and tighten just enough to lock the nut, but still allows the bracket to pivot with some resistance.

